

 
Digital keypad açıklaması



- | | |
|--|--|
| <p>1 Status Display
Display the driver's current status.</p> <p>2 LED Display
Indicates frequency, voltage, current, user defined units and etc.</p> <p>3 Potentiometer
For master Frequency setting.</p> <p>4 RUN Key
Start AC drive operation.</p> | <p>5 UP and DOWN Key
Set the parameter number and changes the numerical data, such as Master Frequency.</p> <p>6 MODE
Change between different display mode.</p> <p>7 STOP/RESET
Stops AC drive operation and reset the drive after fault occurred.</p> |
|--|--|

Digital Keypad çalışma Adımları

Setting Mode



NOTE: In the selection mode, press MODE to set the parameters.

Setting parameters



NOTE: In the parameter setting mode, you can press MODE to return the selecting mode.

To shift data



Setting direction (When operation source is digital keypad)

